

TM 4-STROKE 2004 – ALL MODELS IGNITION TIMING

Position between flywheel and pick-up when piston is 0° before T.D.C. If necessary, move the pick-up to adjust. Check if the distance between pick-up and flywheel is correct.

