


## CHECK ENGINE OIL LEVEL


You should check the level of the engine oil with the engine at standstill but while it is still warm. Park the vehicle on level ground and keep it vertical (not on its side stand).

Remove the cap on the top (1) and the screw on the right-hand side (2). If no engine oil drips out of the latter you will need to top up the level through the cap (1). When the oil starts to flow out of the hole (2), close it using the screw. The screw indicates a 400 cc residual amount of engine oil, it is therefore necessary to add 200-250 cc of oil. You are advised to use the same type of engine oil already in the engine.

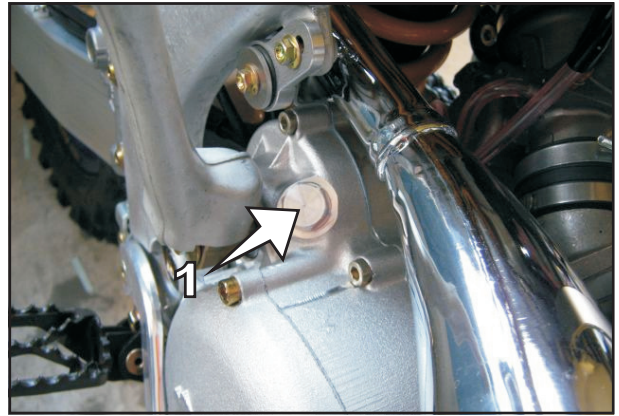

### **⚠ WARNING**

LOW OIL LEVEL, LOW QUALITY OIL, MAINTENANCE INTERVALS LONGER THAN THOSE ESTABLISHED, CAUSE SERIOUS DAMAGE TO THE ENGINE

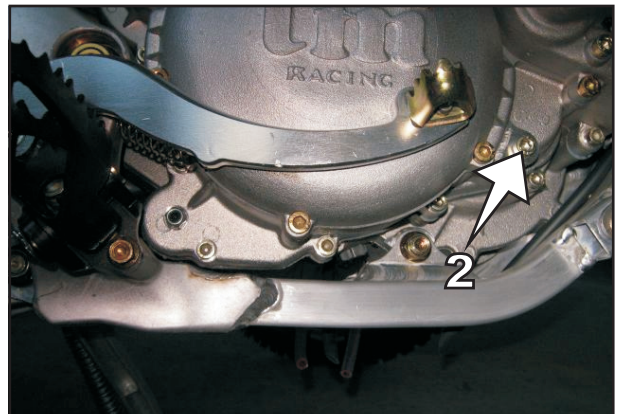

## ENGINE OIL

TM use and recommended motor oil Bel-Ray Gear Saver Motorcycle Transmission oil SAE 80W.

### **⚠ WARNING**

LOW OIL LEVEL, LOW QUALITY OIL MAINTENANCE INTERVALS LONGER THAN THOSE ESTABLISHED, CAUSE SERIOUS DAMAGE TO THE ENGINE.